



This inspection is from the front of the driver's door to the end of the tractor. Pointing at the items say these phrases

- THE <u>MIRROR BRACKET</u> IS SECURELY MOUNTED AND NOT BROKEN OR DAMAGED
- THE <u>TURN SIGNAL MARKER LIGHT</u> IS THE PROPER COLOR, YELLOW OR AMBER, AND NOT CRACKED, BROKEN, OR DIRTY
- THE <u>DOOR</u> OPENS AND CLOSES PROPERLY. THE HINGES ARE NOT BROKEN OR BENT. THE SEAL IS IN PLACE AND NOT DAMAGED

THE <u>FUEL TANK</u> IS SECURELY MOUNTED, WITH RUBBER FUEL TANK
STRAP LINER AND NOT LEAKING. THE CAP IS TIGHT, SEAL INTACT, AND
THE CHAIN IS PRESENT



This inspection is from the front of the driver's door to the end of the tractor. Pointing at the items say these phrases

- THE <u>STEPS AND CATWALK</u> ARE SECURELY MOUNTED, THERE IS NO MISSING HARDWARE AND NO EXCESSIVE DEBRIS
- THE FRAME IS NOT BENT OR TWISTED AND THERE ARE NO ILLEGAL WELDS
- THE <u>DRIVE SHAFT</u> IS NOT BENT OR CRACKED AND THE UNIVERSAL JOINTS ARE FREE OF FOREIGN OBJECTS

 THE <u>EXHAUST</u> IS SECURELY MOUNTED AND IS NOT MISSING ANY HARDWARE. THERE ARE NO SIGNS OF LEAKS, SUCH AS CARBON SOOT



This inspection is from the front of the driver's door to the end of the tractor. Pointing at the items say these phrases

 THE FRONT AND REAR <u>TORSION ARM MOUNTS</u> ARE SECURELY MOUNTED TO THE FRAME AND NOT DAMAGED

THE <u>U-BOLTS</u> ARE SECURELY MOUNTED AND NOT CRACKED OR BROKEN


 THE <u>SHOCK ABSORBERS</u> ARE SECURELY MOUNTED AND NOT LEAKING. THE RUBBER BUSHINGS ARE NOT WORN

THE <u>AIR BAGS</u> ARE SECURELY MOUNTED AND NOT LEAKING. THERE A SPLITS OR CUTS AND THEY ARE NOT LEAKING



This inspection is from the front of the driver's door to the end of the tractor. Pointing at the items say these phrases

- THE <u>AIR HOSE TO THE BRAKE CHAMBER</u> IS SECURELY MOUNTED ON BOTH ENDS. THERE ARE NO SPLITS OR CUTS AND IT NOT LEAKING
- THE <u>BRAKE CHAMBER</u> IS SECURELY MOUNTED. IT IS NOT CRACKED OR BROKEN AND IT IS NOT LEAKING
- THE <u>SLACK ADJUSTER</u> HAS NO BROKEN PARTS AND IS NOT LOOSE. THE PUSH ROD IS AT A 90° ANGLE TO THE CHAMBER AND HAS NO MORE THAN 1" OF PLAY.
- THE <u>BRAKE PAD</u> IS SECURELY MOUNTED AND NOT BROKEN OR CRACKED.
 THE PAD MUST HAVE A MINIMUM OF ¼" DEPTH WITH NO SIGNS OF CRACKING OR GLAZING
- THE BRAKE DRUM IS SECURELY MOUNTED. IT IS NOT CRACKED OR BENT AND HAS NO BLUEING FROM EXCESSIVE HEAT

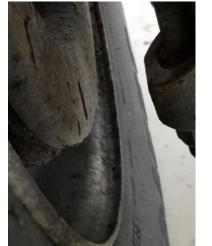





This inspection is from the front of the driver's door to the end of the tractor. Pointing at the items say these phrases

- THE <u>WHEEL</u> IS NOT DAMAGED, CRACKED, OR BENT INSIDE OR OUTSIDE. THERE ARE NO WELDS
- CHECK FOR PROPER TIRE INFLATION WITH AN AIR GAUGE



- THE <u>TIRE SIDEWALLS</u> HAVE NO SPLITS OR CUTS AND THE TREAD IS EVENLY WORN
- THE TIRE TREAD DEPTH OF AT LEAST 2/32"





This inspection is from the front of the driver's door to the end of the tractor. Pointing at the items say these phrases

• THE <u>DUAL TIRES</u> HAVE NO GAP BETWEEN THE WHEELS. THERE ARE NO FOREIGN OBJECTS BETWEEN THE TIRES



- THE <u>VALVE STEM</u> IS SECURELY MOUNTED, NOT DAMAGED AND HAS A METAL CAP
- THE <u>LUG NUTS</u> AT NOT CRACKED, BROKEN OR MISSING. THERE ARE NO RUST TRAILS OR SHINY THREADS FROM LOOSE LUG NUTS
- THE <u>HUB SEAL</u> IS NOT CRACKED, BROKEN, OR LEAKING. THE OIL LEVEL IS ADEQUATE



This inspection is from the front of the driver's door to the end of the tractor. Pointing at the items say these phrases

- THE <u>TAILLIGHTS</u> ARE THE PROPER COLOR, RED, AND ARE NOT CRACKED, BROKEN, OR DIRTY
- THE <u>DOT TAPE</u> IS SECURELY MOUNTED, AND IS NOT DIRTY AND COVERS 100% OF THE REAR OF THE VEHICLE
- THE <u>MUD FLAP</u> SUPPORT IS SECURELY MOUNTED AND THE MUD FLAP IS NOT DAMAGED
- THERE IS ENOUGH <u>SPACE</u> BETWEEN THE REAR OF THE TRUCK AND THE LANDING GEAR FOR TURNS
- THE <u>LICENSE PLATE BULB</u> IS PROPERLY INSTALLED

